SENSING-SAF-START[®] MODEL #1997 120-VOLT A.C., 15 AMP, 3/4 H.P.

ANTI-AUTOMATIC RESTART PROTECTION PROVIDES NO-VOLTAGE PROTECTION FOR FRACTIONAL H.P. MOTOR DRIVEN EQUIPMENT FOR PLUG-IN WIRING

INSTALLATION INSTRUCTIONS

The **SENSING-SAF-START**[®] is designed to update fractional H.P. driven equipment to the N.F.P.A. and O.S.H.A. requirement that equipment cannot automatically restart after a power interruption. This is accomplished by replacing the power cord and plug now on equipment with the **SENSING-SAF-START**[®] and cord. To accomplish this, follow these steps:

- 1. Unplug the power cord now on the equipment from the wall outlet.
- 2. Disconnect the other end of the power cord on the equipment.
- 3. Connect the cord on the SENSING-SAF-START[®] to the equipment where the old cord was connected (terminal box, switch, etc.).

NOTE: The black wire goes to the equipment switch.

The **white** wire is common. The **green** wire is ground.

(SEE WIRING DIAGRAM BELOW)

- 4. Turn equipment switch "off."
- 5. Insert the plug into a 120-VAC duplex type wall outlet.
- 6. Depress the reset button on the SENSING-SAF-START[®].

The equipment will now operate as before, except that whenever the power is interrupted to the SENSING-SAF-START[®], the equipment will not operate after power is restored until the equipment switch is turned "off," and then the reset button on the SENSING-SAF-START[®] is depressed.

WARNING: The **SENSING-SAF-START**[®] is designed for use on one piece of equipment **only**, wired direct, as described above. Any other use or installation will void all warranties.

CAUTION: The **SENSING-SAF-START**[®] is not a waterproof product. Do not use in a wet environment.

- OPERATING INSTRUCTIONS -

AFTER POWER IS RESTORED TO THE PLUG, DEPRESS THE PUSH BUTTON. IF A "**BUZZ**" IS HEARD, THE MACHINE SWITCH HAS BEEN LEFT "**ON**." TURN THE MACHINE SWITCH "OFF," THEN DEPRESS THE PUSH BUTTON AGAIN. NOW THE MACHINE WILL RUN AS BEFORE.

